



May 2007

3400 Software Upgrade Procedure


1. Download the [3400 Update 1.1.14.EXE](#) file to your computer.
2. Connect your USB drive to the computer.
3. Open the [3400 Update 1.1.14..EXE](#) file and specify the drive letter of your USB drive.

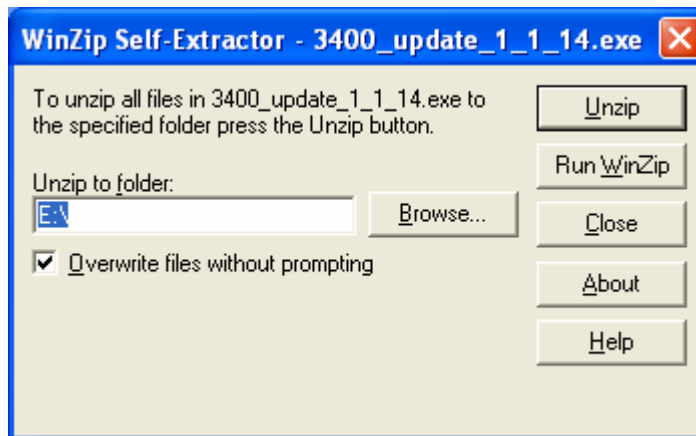

4. Click on the **Unzip** button. This will extract the files to a **MET1** folder on the USB drive. When it is done, you will see the following message.

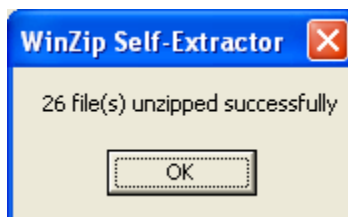

5. Run Windows Explorer and examine the USB drive. The application executable (cyclone.exe), supporting DLLs, and language specific directories must be located in the MET1 folder shown below.

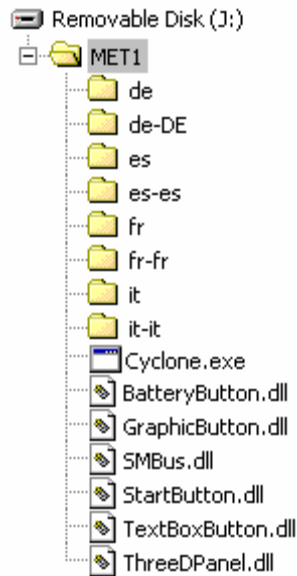

Directory and file structure on USB Flash drive

6. Power down the 3400, if needed, and disconnect it from AC power. Also eject any batteries that might be installed.
7. Plug the USB Flash Drive into the USB port and apply AC power and any batteries that were ejected. An upgrade dialog box will be seen during the upgrade process, which indicates current activity. The upgrade process takes roughly 3 minutes to complete.
8. Upon successful completion of the upgrade process, the instrument will continue to the main screen of the 3400. To verify the upgrade, go into the Diagnostics screen and verify the version number located on the lower left-hand portion of the screen matches the version number of the update.